



## **CreatBot 3D Printer**

# **User manual**

English V7.3

# CONTENTS

Notice .....	3	Model Mirror .....	22
Machine Diagram		View Mode .....	23
Front .....	4	Right Click on Model .....	24
New Printer Head .....	5	Toolpath Structure .....	24
Printer Operation		Basic Setting .....	25
Leveling Platform .....	6	Advanced Setting .....	26
Paving Crepe Paper .....	6	Expert Setting .....	27
Load Filament .....	7	Skirt/Brim/Raft .....	28
Unload Filament .....	8	Plugins .....	28
Main menu .....	9	Start/End GCode .....	29
Status page .....	10	Dual Head Printing .....	29
Detail page .....	11	Align Dual Head Horizon .....	30
Printing page .....	12	Align Dual Head Vertical .....	31
Axis operation .....	13	Add Multi Type Printer .....	31
Filament menu .....	14	Using skills	
SD Card/U-disk .....	15	Installation section .....	32
Setting menu .....	16	Software .....	33
Info. menu .....	16	Change filament .....	33
Software Operation		Frequently Asked Questions	
CreatWare Setup .....	18	Paving Kapton .....	34
Quick Print UI .....	19	Change Fuse .....	35
Print Your First Model .....	19	Adjust Z Limit .....	35
Full Setting UI .....	20	Print PLA and ABS .....	35
Mouse Operation .....	21	Specifications .....	36
Model Rotate/Scale .....	21		

## Icon conventions



Tip icon to remind users to have a good method or technique.



Note icon, to remind the user must be given adequate attention.



Prohibition icons, prevents users from unauthorized operation.

# Notice

## Read First

Thank you for choosing CreatBot 3D printer!

This manual contains important information about the installation, use, maintenance and common problems of CreatBot 3D printer. Please read this manual carefully before using 3D printer. All losses caused by the breach of the notes and the operation process of the operation process will be borne by the user. Please use the filament provided by CreatBot, or high quality filament by third manufacturers. Due to the use of third party inferior material caused by the failure of the printer, the loss will be borne by the user.

Software running environment, 2G or above processors, at least 1G memory, compatible with Windows, MAC, or Linux, please use memory as much as possible.

I wish you have fun with CreatBot 3D printer!

## Danger Warning



The nozzle's temperature will reach 300 degrees, don't touch.



The platform's temperature will reach 120 degrees, don't touch.



Please make sure that the printer connected to the ground.



Do not attempt to open the case, be careful of electric shock.

## Working Environment



The 3D printer can work in the indoor environment of 5 °C to 30 °C.




Long-term not use of the printer, be sure to keep off dust, moisture.



Long-term not use of the filament, please be sealed to prevent deterioration.


# Machine Diagram

Front

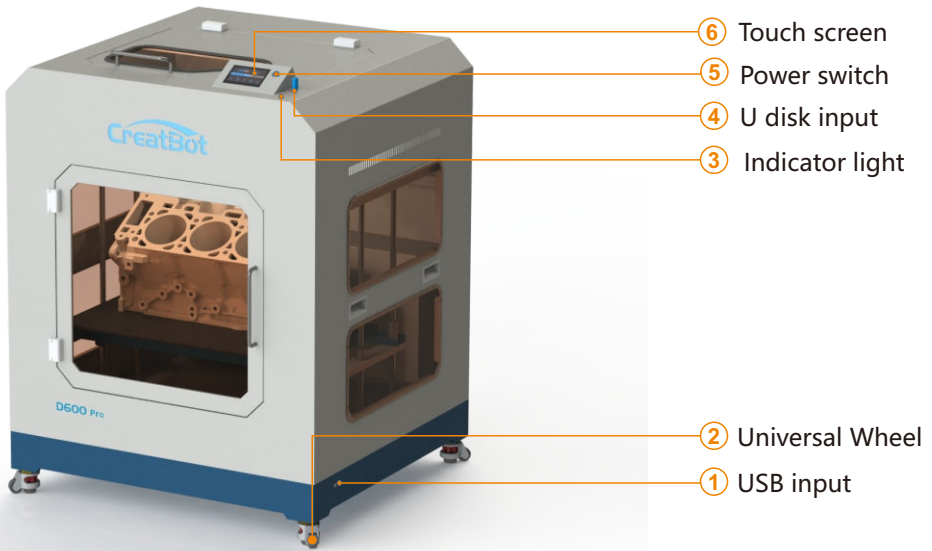

# Machine Diagram

## New Printer Head

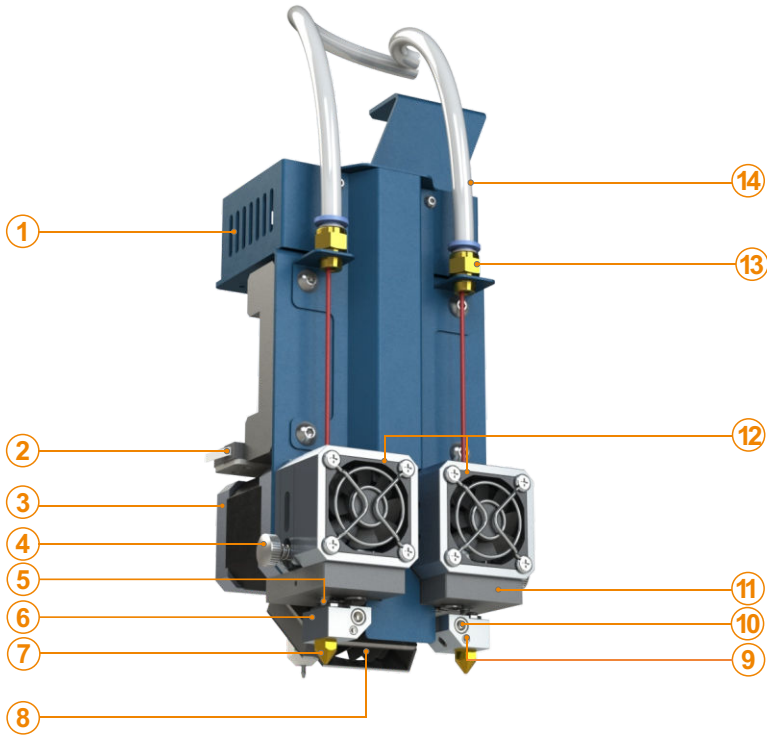

- 1. PCB box
- 2. X limited switch
- 3. Extruder motor
- 4. Filament press button
- 5. Heatbreak

- 6. Heat block
- 7. Nozzle
- 8. Cooling fan
- 9. Thermistor
- 10. Heating tube
- 11. Heat sink

- 12. Extruder box
- 13. Connector
- 14. Feeding tube
- 5+6+7. Hotend

## Machine Diagram


D600 Pro upgraded in 3 more key functions compared to D600 printer.



Auto leveling system (Available on D600 Pro)  
Auto-leveling working plate make leveling easily





Hot Chamber system can make inside temperature up to 70 degree.

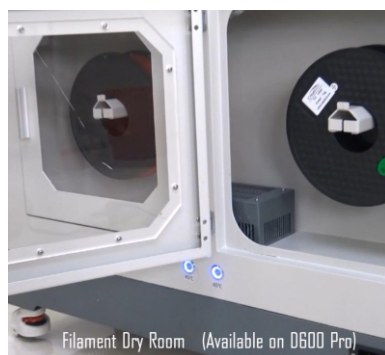

Filament dry room have 2 temperature options to set. (45 degree /65 degree.)

# Printer Operation

## Leveling Platform

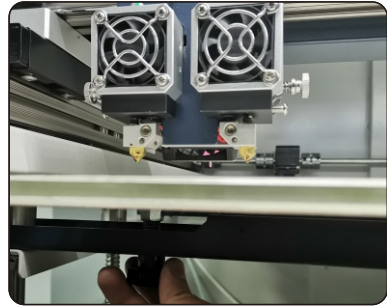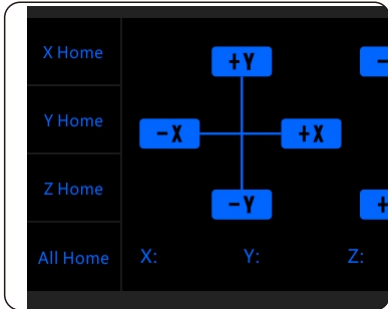

### **I Printer without Auto Leveling- Leveling platform manually**

1. Turn on machine
2. On touch screen, choose "Move axis" -> "All home" , make nozzle close to platform.
3. Then choose "Move axis" again, -> 10mm -> -Z once. Then check the distance between nozzle and platform. (0.2mm)
4. Move (push) print head to print area along 4 corners by hands and tighten or loosen 4 black nuts at the same time to down or up the bed. (Tight nut will lower bed; loose nut will raise bed)
5. Make sure the distance between nozzle and bed is 0.2mm around. (distance approximately the same thickness as that of one name card)

### **II Printer with Auto leveling**


- 1: Enter Setting->Auto leveling ->Probe. Machine will start to detect 25 points.
2. If the distance too far, increase Servo Z offset value (+0.2mm each time). If too close or touch the bed, decrease Servo Z offset value. (-0.2mm each time).
3. Make sure the distance between nozzle and bed is 0.2mm around.

Note: Servo Z offset means vertical height between nozzle and detector when probe needle outstretch. It is a fixed value if you don't change hotend or detector.


Contact us for videos. Or Youtube enter keywords "CreatBot D600 leveling bed "

## Printer Operation


### Load Filament

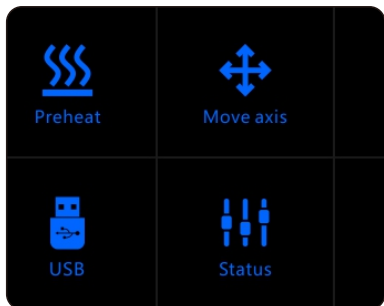


Preheat head

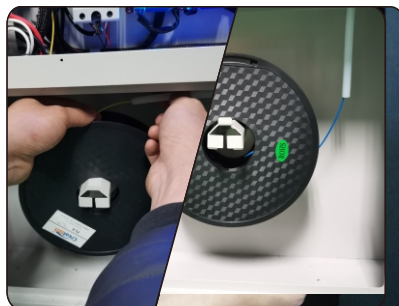

Straightened filament

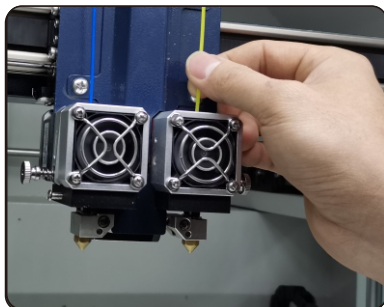

Load filament

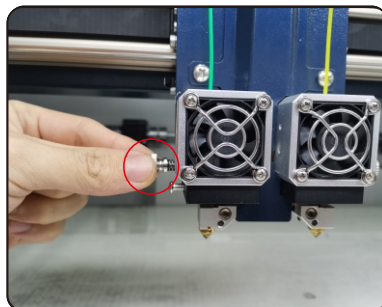

Tighten the nut

- 1.Preheat the hotend before loading filament.
- 2.Straightened filament and check the filament do not self-winding.
- 3.load filament,and fix it on the filament shelf.
- 4.Twist off quick fitting, load the filament until filament beyond quick fitting. Insert filament to extruder hole manually and through it until melted and flowing naturally.(Or choose extrude filament on touch screen). Tight quick fitting.
- 5.Tighten the compression nut, tightness appropriately. Do same like the photo in red area. (Do not overtight, otherwise filament will be cut off. )




*Notice: Pressed filament too tight or too loose will affect normal wire feeding.*




# Printer Operation


## Unload/Change Filament

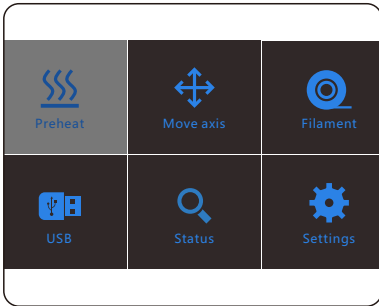

Unload filament menu

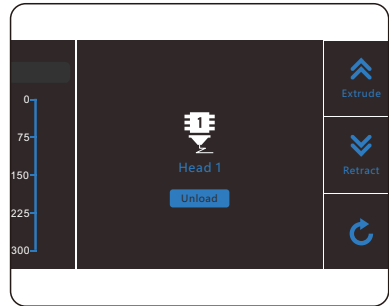

Preheat head

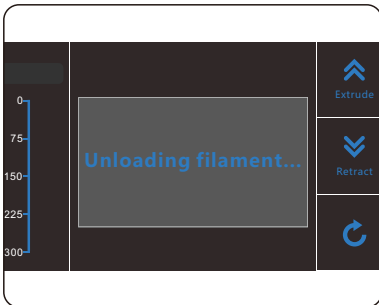

Unloading filament





Pull out filament

1. Enter "Filament" menu -> "Unload filament", and select the head you want unload.
2. Wait for the nozzle heated to a suitable temperature.
3. After reaching temperature, feeder will send a certain number of filament, and then automatically withdraw filament.
4. To manually unload filament, same as above mentioned.





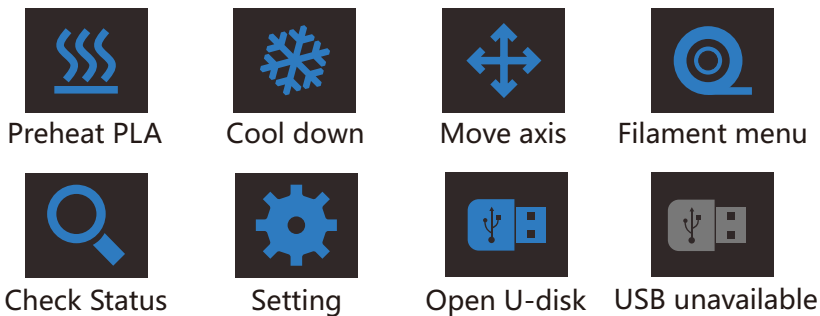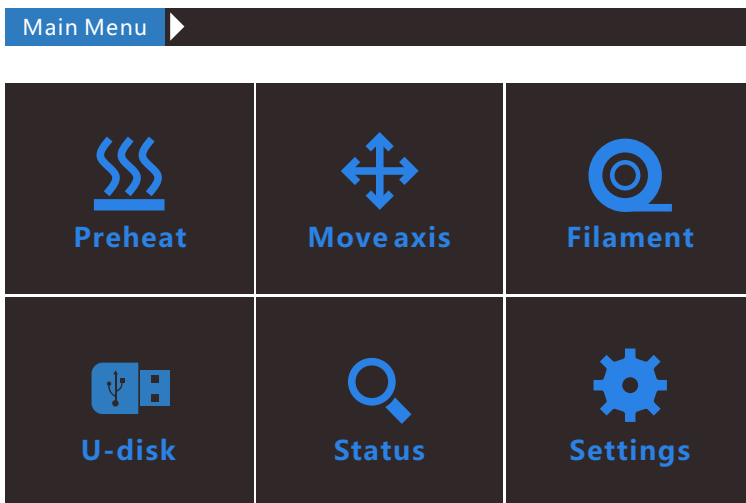

# Printer Operation


## Touchscreen





# Printer Operation


Status Page ▶

 210°C	 210°C	 45°C
 200°C	 200°C	 40°C

Print speed: 100%	X: 0.00mm	
Fan speed : 100%	Y: 0.00mm	
Flow : 100%	Z: 0.00mm	



 210°C	Touch and set up the temp of the nozzle.
200°C	<b>210°C</b> Target temp.1
	<b>200°C</b> Current Temp.1

 45°C	Touch and set up the temp of the hotbed
40°C	<b>45°C</b> Tar.hotbed.temp
	<b>40°C</b> Cur.hotbed.temp





 
 
<b>Print speed: 100%</b>	Printing speed	<b>X:00.00</b>	X,Y,Z current position of hotend.
<b>Fan speed : 100%</b>	Fan speed	<b>Y:00.00</b>	
<b>Flow : 100%</b>	Flow	<b>Z:00.00</b>	


 Use information


 Back

# Printer Operation

Detail page ▶

 210C 210C	 210C 210C	 45C 45C	
<div style="width: 60%; height: 10px; background-color: #007bff;"></div>			
<b>Print speed:100%</b> <b>Flow:100%</b> <b>Fan speed:100%</b> <b>Z: 0.00mm</b>			

 210°C	Touch and set up the temp of the nozzle.
200°C	210°C Target temp.1
	200°C Current Temp.1

 45°C	Touch and set up the temp of the hotbed.
40°C	45°C Tar.hotbed.temp
	40°C Cur.hotbed.temp


<div style="width: 50%; height: 10px; background-color: #007bff;"></div> 50.00%	Current printing progress
---	---------------------------

<b>Print speed:100%</b>	Printing speed
<b>Fan speed:100%</b>	Fan speed

<b>Flow:100%</b>	Flow
<b>Z: 0.00mm</b>	Current Z position

 Use information	 Setting	 Back
---	---	--

# Printer Operation

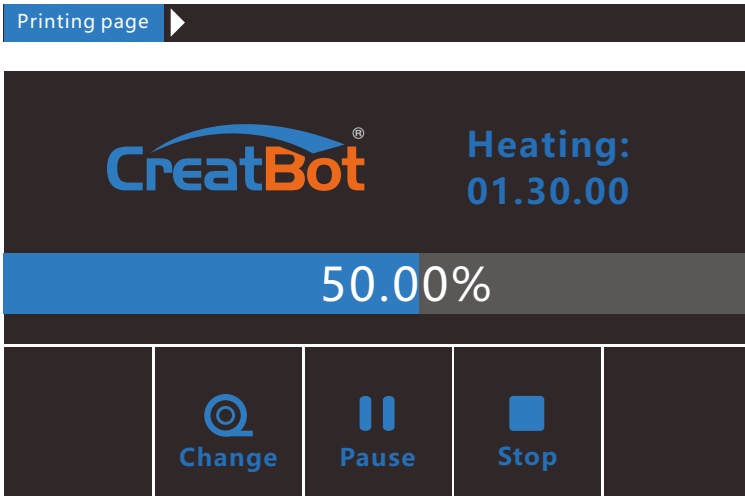

**50.00%** Current printing progress

**Heating: 01.30.00** Time printed



Pause and Change filament.



Continue printing



Pause print



Cancel print





Z up




Z down


# Printer Operation

 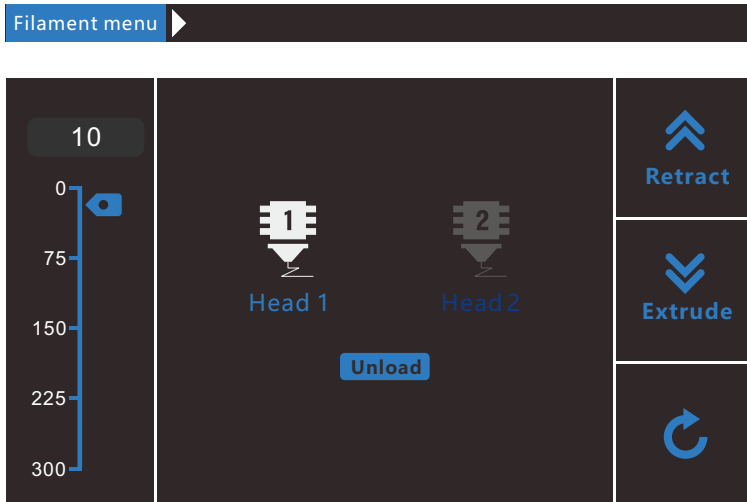

Click and enter a value

 


#1 extruder

 

Adjust value when extrude/retract filament



#2 extruder (unavailable)

 

Retract filament



Extrude filament





Retract filament



Back

# Printer Operation

 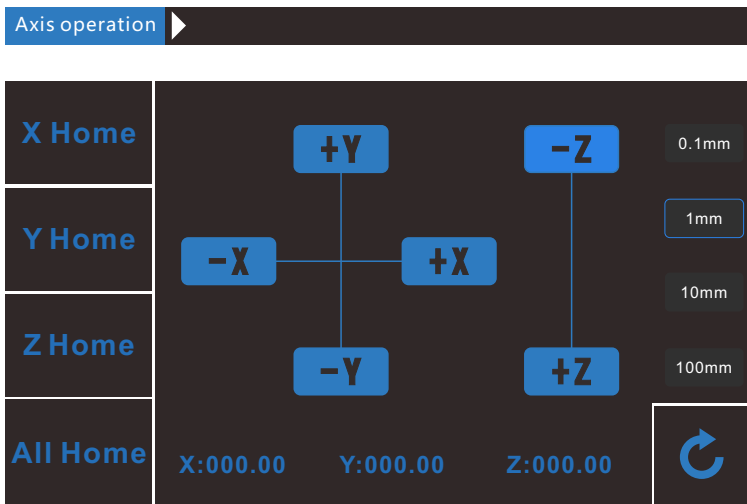

Minimum units



Move X to home



 
Move X/Y axis



Move Y to home




Z up




Move Z to home



 Z down



All axis to home

 


X,Y,Z current position of hotend.



Back

# Printer Operation

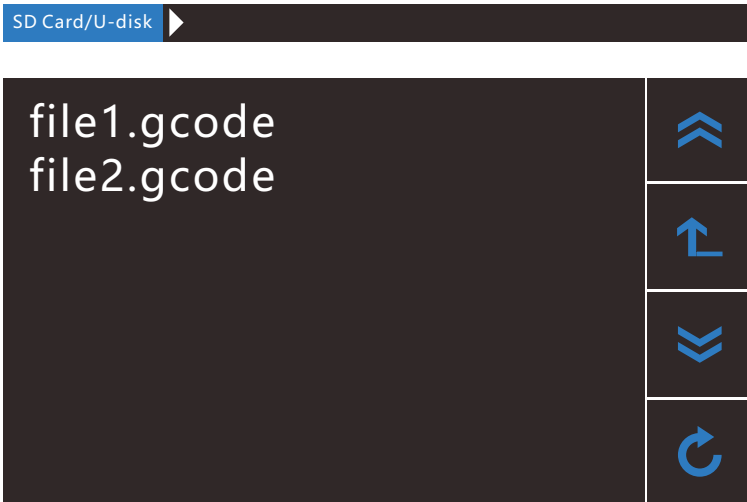

file1.gcode  
file2.gcode

Click and choose a file to print



Last page



Next page



Superior menu




Back





# Printer Operation

Setting menu ▶

<b>Motor</b>		 <b>Reset</b>
<b>X step:</b> 106.6666	<b>Z step:</b> 640.0000	
<b>Y step:</b> 106.6666	<b>E step:</b> 130.0000	 <b>Save</b>
<b>Preheat</b>		
<b>Extruder temp.:</b> 210°C	<b>Fan speed :</b> 0 %	
<b>Bed temp.:</b> 45°C	<b>More</b> ▼	

**Fan speed**

 
**Sink fan speed :**

**Filter fan speed :**

**X step:** 106.6666    **Z step:** 640.0000    X/Y/Z and extruder motor setting (range:5-9999)  
**Y step:** 106.6666    **E step:** 130.0000

**Extruder temp.** 210°C    **Fan speed :** 0 %    Preheat setting.  
**Bed temp.** 45°C    Hotend (range 0~400)  
 Fan speed (range 0-100)  
 Bed temp.(range 0-120).

**Sink fan speed :** 100 %    Sink fan speed (range 0-100)  
**Filter fan speed :** 100 %    Filter fan speed (range 0-100)



Reset




Save



Back

# Printer Operation

Info. page ▶

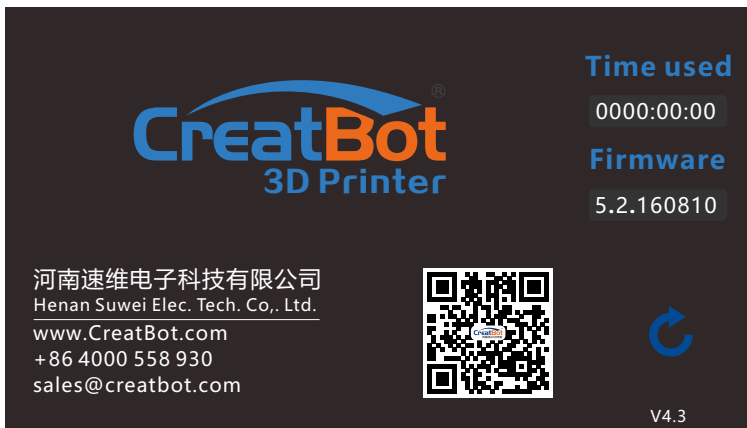

The main information screen features the CreatBot 3D Printer logo at the top center. To the right, it displays 'Time used' as 0000:00:00 and 'Firmware' as 5.2.160810. Below the logo, it lists the company name in Chinese and English: '河南速维电子科技有限公司' and 'Henan Suwei Elec. Tech. Co., Ltd.', along with the website 'www.CreatBot.com', phone number '+86 4000 558 930', and email 'sales@creatbot.com'. A QR code is positioned to the right of the contact information. A blue circular refresh icon is located at the bottom right, with 'V4.3' written below it.

**Time used**

0000:00:00

Print time used

**V4.3**

Screen version

**Firmware**

5.3

Firmware version





Back

# Software Operation

## CreatWare Setup

Download CreatWare installation package from the CD-ROM or [www.CreatBot.com](http://www.CreatBot.com), follow the prompts to install the software, try using the default installation path as well.

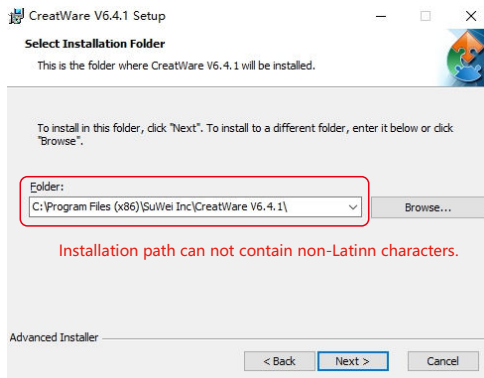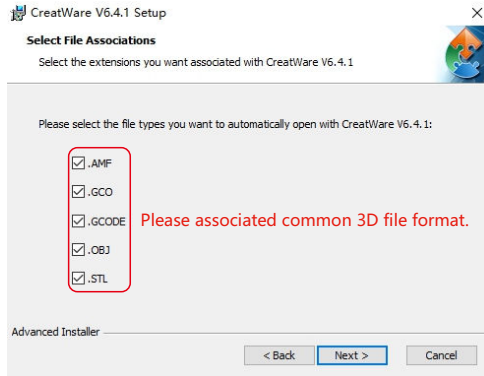

Please associated common 3D file format.

When there is a driver digital signature, please choose to agree. When finished the driver folder will locate at installation directory.

The software will select the correct language according to your OS, please select the right machine type and number of nozzles and ignore the other option and guide.

## Software Operation

### Quick Print UI



When insert U-disk, the toolpath will saved to the U-disk.

The file name can not contain non-Latinn characters.


## Print Your First Model

Insert U-disk to the card reader, open the CreatWare, load 3D model file[1], choose correct filament and option [2], finally click save button[3], you can now finish slice model.

Insert U-disk to the printer, browse and select the Gcode file you just saved, the printer will automatically start to heating, when the temperature reaches, the printing will start.

# Software Operation

## Full Setting UI

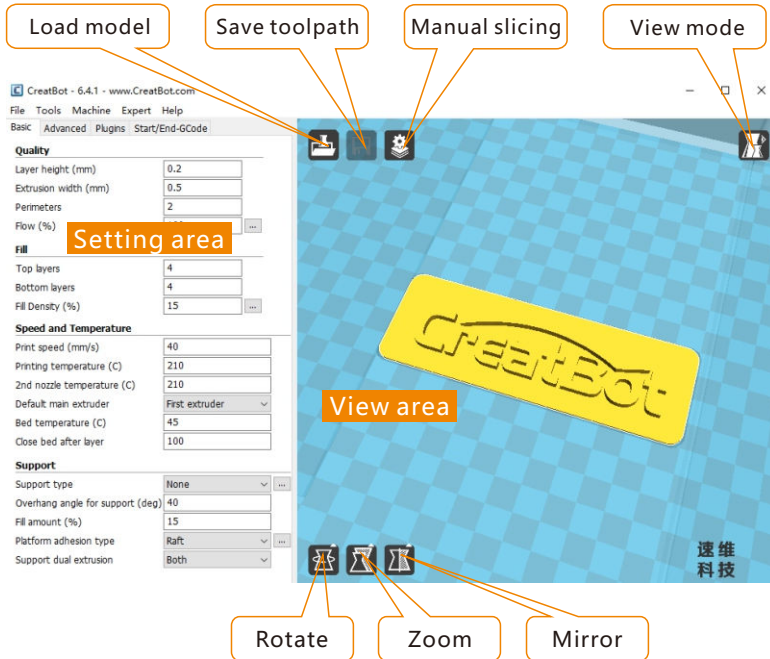


As you can see from the complete UI, the left side of the software is setting area, the right side is view area. The setting area contain "Basic", "Advanced", "Plugins", "Start/End GCode" four tabs. The Basic tab is the most common settings, usually the most frequently used parameters are here. Each parameter has a mouse-over tips, you can set parameters according the prompt. If you want to restore the default settings, please click on the menu "Tools"-> "Restore Default".



*Tip: Double-click view area can quickly load 3D model file. The view mode and edit icon will appear when you select the 3D mode.*


# Software Operation
 
## Mouse Operation




### Left click

 Select model, hold and move to change position, double-click to load 3D models.




### Right click

 Hold and move to rotate the viewpoint around the 3D model.



### Left + Right

 Hold and move the mouse to zoom.



### Scrollwheel

Use the scroll wheel to zoom in or out.



### Left + Shift

Click and drag in rotary model can according to each 1 degree angle.

Shift



### Right + Shift

Hold and move the mouse to pan the 3D view.

Shift

## Keyboard Shortcut

**Ctrl+L** Load model/Picture

**Ctrl+S** Save model as

**Delete** Remove model


**F5** Refresh view area

**Ctrl+E** Export setting

**Ctrl+,** Preferences

# Software Operation

## Model Rotate

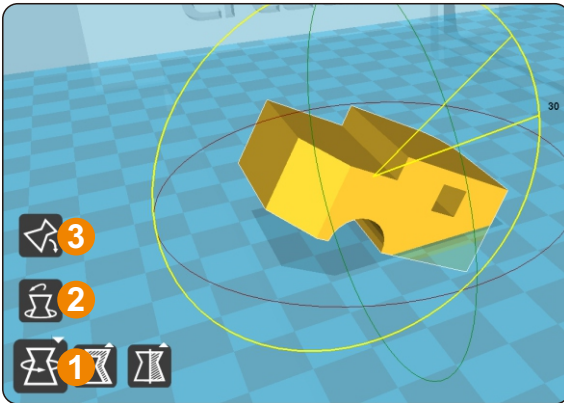

Click on the left corner of the rotate button [1], you can see three ring line around the model, respectively along the X, Y, Z direction. The default rotation angle is 5 degrees, press the Shift key can restrict the rotation angle to 1 degree.

Button [2] is the reset button, can restore rotate status to the default state.


Button [3] is lay flat button, can lay the model flat on the platform automatically.

## Model Scale

Click the left corner of the zoom button [1], you can see a contour line around the model, and shows the current size of the model. You can input the value of the zoom ratio in Scale X / Y / Z , may also directly enter the size you need. Button [4] indicates locking scaling.


Button [2] is zoom reset button, you can restored the model to the default size.

Button [3] for the zoom model size to the maximum print size.

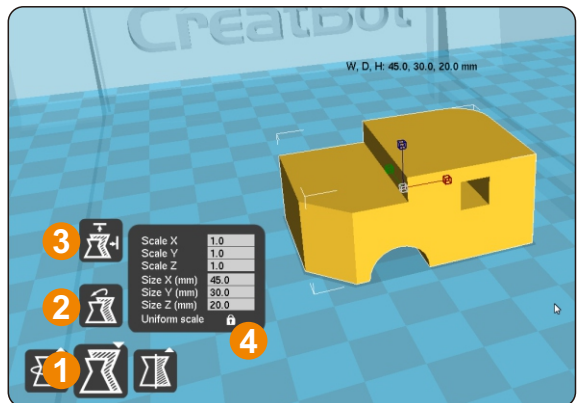

# Software Operation

## Model Mirror

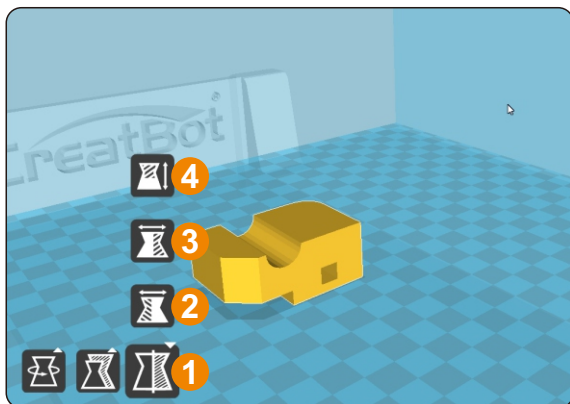

Click the mirror button [1], you can pop up the mirror menu.


Button [2] is a mirror along the X axis.

Button [3] is a mirror along the Y axis.


Button [4] is a mirror along the Z axis.

Note that the mirror transformation is different from the rotation, such as the mirror transformation will lead to a change in the direction of rotation, and the rotation will not change the model.

## View Mode

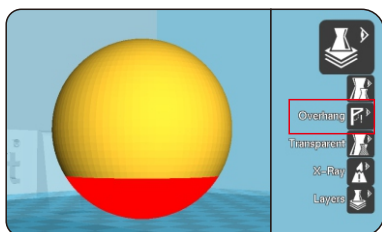

From the overhang view, you can see the suspended part of the model which is shown in red color. By changing the supporting angle can be seen suspended parts size is dynamically changing.

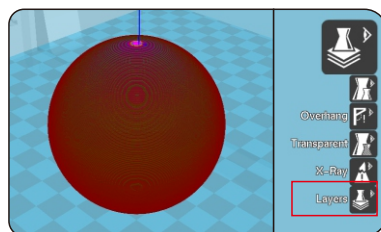


By slice view can easily observe the generated path, you can easily observe the different layers of sliced by slicing altitude indicator, use Ctrl + arrow keys can also be observed layer-by-layer.





# Software Operation

## Right Click on Model

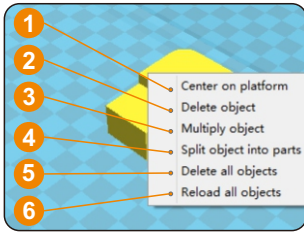


Right-click on the model pop-up shortcut menu, here are more features:

[1] "Centered" make the model back to the center position of the platform. [2] "Delete" to remove the currently selected model. [3] "Multiply" to copy the currently selected model and automatically position, which is useful for printing more than one model at a time. [4] "Split" multi-component model can be split into its separate components, this process more time-consuming, try to split the model in the modeling software, models splitted can be printed individually and then assembled together. [5] "Delete All" to delete all the models loaded. [6] "Reload all" Reload all models, same as F5.

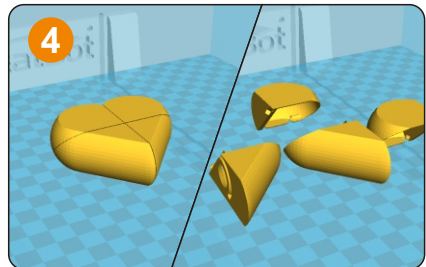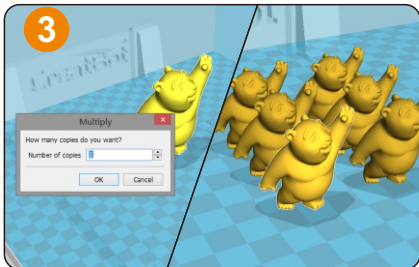

## Toolpath Structure

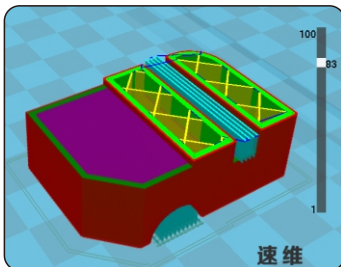


- Red represents "outer shell"
- Yellow represents "infill"
- Green represents "inner shell"
- Blue represents "support"
- Purple represents "bottom and top shell"

Drag layer indicator can browse different level paths, Ctrl + arrow keys to browse layer by layer. 3D printing is the superposition of these different layers and built layer by layer.

# Software Operation

## Basic Setting

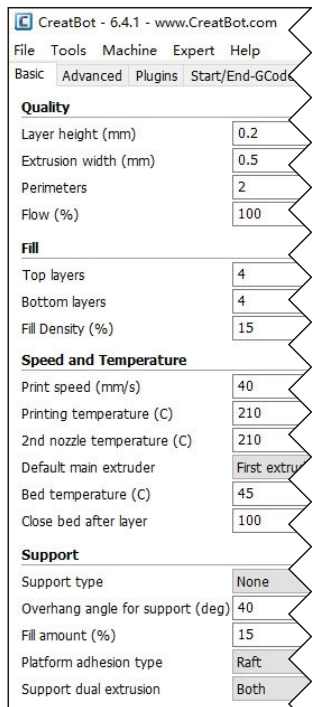

**Layer height:** This is the most important setting to determine the quality of your print, maximum value not exceed 80% of the nozzle diameter.

**Shell thickness:** Refers to the total thickness of the inner and outer walls, the outer wall is only one, the inner wall can be more, set this value to an integer multiple of the diameter of the nozzle.

**Flow:** Refer to the amount of printing material, 100% standard dosage, the more material the model prints more plump.

**top/bottom thickness:** Is the thickness of the upper and lower models, usually a multiple of layer height.

**Fill density:** Control how density filled the insides of your print will be, a value around 20% is usually enough, 0% for hollow.

**Print speed:** Speed at which printing happens. Print speed is affected by many factors, it is recommended to use low speed for complex model, high speed will cause the feed shortage, need improve nozzle temperature to compensate.

**Nozzle temperature:** Is the melting temperature of filament, general use 200°C for PLA and 240°C for ABS.

**Bed Temperature:** General use 45°C for PLA and 70°C for ABS.

**Default main head:** The default is the first nozzle, can also be set to other nozzles, this can reduce the times of changing filament.

**Support type:** The touching build plate support type is shown in figure [A], everywhere support is shown in figure [B].


**Support angle:** The larger the angle, the more support generate.

**Fill amount:** The larger the fill, the more support generate.

**Platform adhesion type:** The model which is not easy adhesion


on the platform please use Brim, which is easy to warped or ABS filament please use Raft.

## Support Type

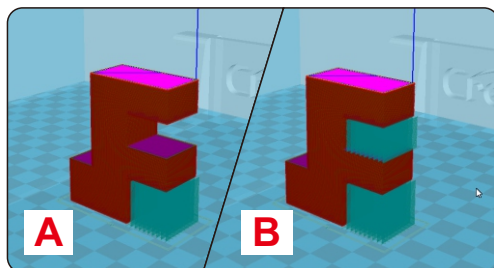

# Software Operation

## Advanced Setting

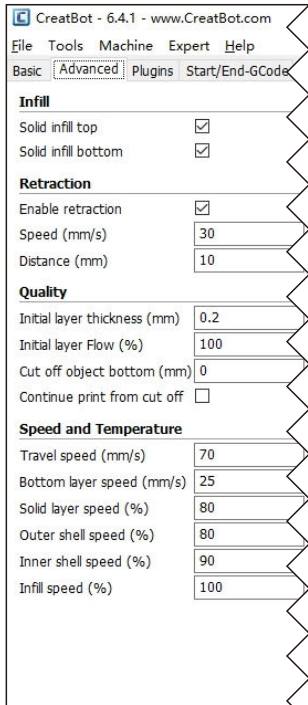

**Solid fill top:** Refers to whether to print the top surface of the model, uncheck will print it with infill method.

**Solid fill bottom:** Same as above, and so on.

**Spiralis print:** Refers to the method of spiral printing the outer wall of the model (single layer), and this feature is very suitable for print glass vase model.

**Enable retraction:** When the nozzle is moving over a none-printed area, withdraw a certain length length filament to prevent overflow.

**Retract speed:** The speed of retraction, too fast can lead motor out of step, too slow increase printing time.

**Retract distance:** The length of the filament when enable retraction.

**First layer thickness:** Height of the first layer of printing, generally greater than 0.15mm. □

**First layer flow:** When the set of the first layer is too high, it can be appropriate to increase the extrusion.

**Cut off object bottom:** This can be used for objects that do not have a flat bottom.


**Continue print:** Being "power outages continued" be substituted.

**Travel speed:** The speed when moving over a non-printed area.

**First layer speed:** Slightly slow speed can enhance adhesion

model on the platform.

**Solid layer speed:** The speed is a percentage here, which reference to the global print speed, a combination of different speeds, you can both get a good print quality and a faster print time.

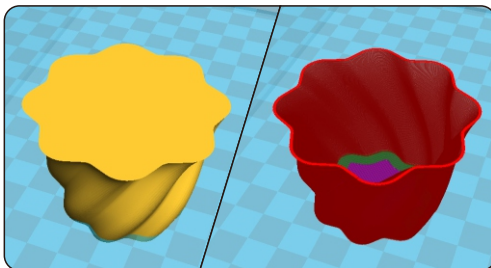

## Spiralise Printing

# Software Operation

## Export Setting

**Nozzle size:** Set the nozzle size.

**Diameter:** Accurate measurement of your filament gives better quality prints.

**Minimum travel:** The minimum distance which can trigger filament retract.

**Minimum extrusion:** The minimal amount of extrusion that needs to be done before retracting.

**Enable combing:** Combing is the act of avoiding holes in the print for the head to travel over.

**Wipe tower:** Is a small tower next to your print where the nozzle wipes itself clean when switching nozzles.

**Dual extrusion switch amount:** Amount of retraction when switching nozzle with dual-extrusion, a value of 15mm seems to generate good results.

**Cooling fan:** The extra cooling fan is essential while printing small model, but when print ABS material, the max fan speed should not more than 50%.

**Skirt:** The skirt is a line drawn around the model at the first layer. This helps to prime your extruder, and to see if the model fits on your platform.

**Brim:** The amount of lines used for a brim, more lines means a larger brim which sticks better.

✕

Expert config




<p><b>Nozzle</b></p> <p>Nozzle size (mm) <input style="width: 80px;" type="text" value="0.4"/></p> <p><b>Filament</b></p> <p>Diameter (mm) <input style="width: 80px;" type="text" value="3.0"/></p> <p>Diameter2 (mm) <input style="width: 80px;" type="text" value="3.0"/></p> <p><b>Retraction</b></p> <p>Minimum travel (mm) <input style="width: 80px;" type="text" value="2"/></p> <p>Minimal extrusion before retracting (mm) <input style="width: 80px;" type="text" value="0.02"/></p> <p>Z hop when retracting (mm) <input style="width: 80px;" type="text" value="0"/></p> <p>Enable combing <input type="checkbox"/> All <span style="font-size: 0.8em;">v</span></p> <p><b>Dual extrusion</b></p> <p>Wipe&amp;prime tower <input type="checkbox"/></p> <p>Tower volume per layer (mm3) <input style="width: 80px;" type="text" value="15"/></p> <p>Ooze shield <input type="checkbox"/></p> <p>Dual extrusion overlap (mm) <input style="width: 80px;" type="text" value="0.1"/></p> <p>Dual extrusion switch amount (mm) <input style="width: 80px;" type="text" value="15"/></p> <p><b>Infill</b></p> <p>Infill overlap (%) <input style="width: 80px;" type="text" value="10"/></p> <p>Infill prints after perimeters <input checked="" type="checkbox"/></p> <p><b>Black Magic</b></p> <p>Spiralize the outer contour <input type="checkbox"/></p> <p>Only follow mesh surface <input type="checkbox"/></p> <p><b>Skirt</b></p> <p>Line count <input style="width: 80px;" type="text" value="1"/></p> <p>Start distance (mm) <input style="width: 80px;" type="text" value="3"/></p> <p>Minimal length (mm) <input style="width: 80px;" type="text" value="260"/></p>	<p><b>Cool</b></p> <p>Enable cooling fan <input checked="" type="checkbox"/></p> <p>Minimal layer time (sec) <input style="width: 80px;" type="text" value="5"/></p> <p>Fan full on at height (mm) <input style="width: 80px;" type="text" value="0.0"/></p> <p>Fan speed min (%) <input style="width: 80px;" type="text" value="100"/></p> <p>Fan speed max (%) <input style="width: 80px;" type="text" value="100"/></p> <p>Minimum speed (mm/s) <input style="width: 80px;" type="text" value="10"/></p> <p>Cool head lift <input type="checkbox"/></p> <p><b>Support</b></p> <p>Structure type <input style="width: 80px;" type="text" value="Lines"/> <span style="font-size: 0.8em;">v</span></p> <p>Distance X/Y (mm) <input style="width: 80px;" type="text" value="1"/></p> <p>Distance Z (mm) <input style="width: 80px;" type="text" value="0.1"/></p> <p><b>Brim</b></p> <p>Brim line amount <input style="width: 80px;" type="text" value="5"/></p> <p><b>Raft</b></p> <p>Extra margin (mm) <input style="width: 80px;" type="text" value="5"/></p> <p>Line spacing (mm) <input style="width: 80px;" type="text" value="3.0"/></p> <p>Base thickness (mm) <input style="width: 80px;" type="text" value="0.3"/></p> <p>Thickness (mm) <input style="width: 80px;" type="text" value="0.25"/></p> <p>Airgap (mm) <input style="width: 80px;" type="text" value="0.2"/></p> <p>Layers <input style="width: 80px;" type="text" value="3"/></p> <p><b>Fix horrible</b></p> <p>Combine everything (Type-A) <input checked="" type="checkbox"/></p> <p>Combine everything (Type-B) <input type="checkbox"/></p> <p>Keep open faces <input type="checkbox"/></p> <p>Extensive stitching <input type="checkbox"/></p> <p style="text-align: center; margin-top: 10px;"><input type="button" value="Ok"/></p>
--	---



*Notice: Most of the setting have been optimized, If you want restore default configuration, use the menu "Tools" -> "Reset profile to default".*

# Software Operation

## Skirt · Brim · Raft

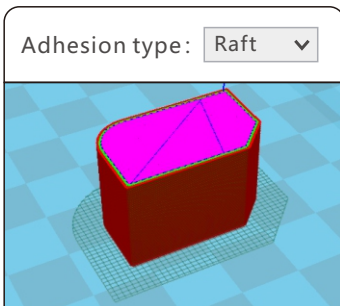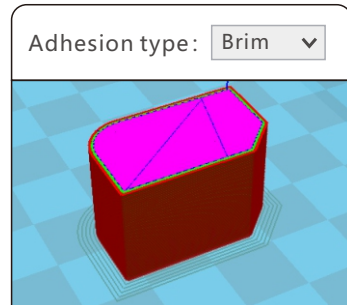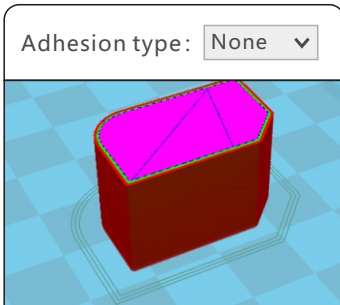


Plugin enable you to easily include your own features, without having to modify the source code or Gcode. In the screen shot above, these can be enabled by clicking on the arrow down button, then you can configure the plugin.




*Notice: Please remove the plugin before you close the software.*

## Plugins

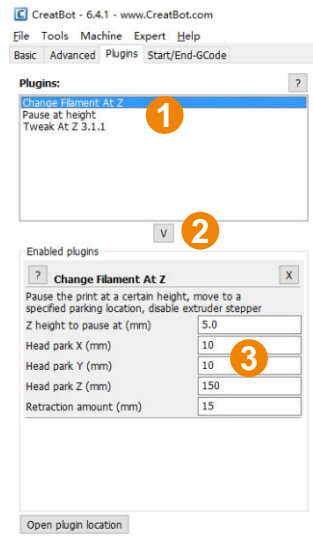

# Software Operation

## Start / End GCode

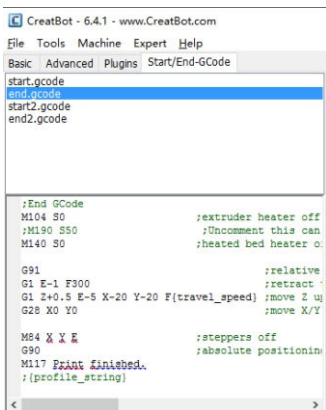


The start and end code are the startup and end procedure of the print, editing this requires knowledge of GCode.

If you want to set the automatic heating station after printing, you can remove the ";" in the code ";M190 S50".

start.gcode is the start code of single extruder, start2.gcode is the start code of double extruder, and so on.

## Dual Head Printing

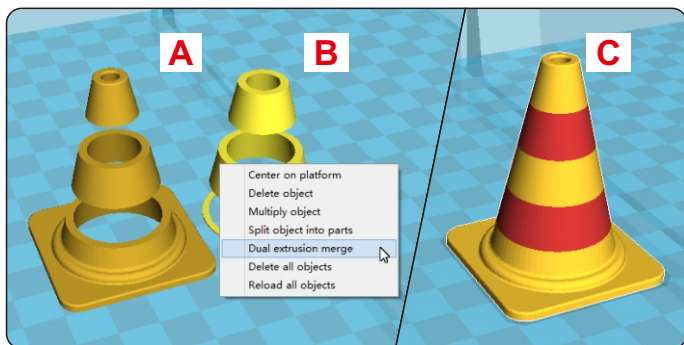

**Step 1:** Load 2 models you want as shown in figure [A] and [B].

**Step 2:** First click [A], then right click on [B], you will get the option: dual extrusion merge, this will merge both models into

one model [C].


**Step 3:** Set parameters like ordinary single color model and save the GCode.



*Tip: The model select first will print by main extruder, the right clicked one by second extruder.*



# Software Operation

## Align Dual Head Horizontal

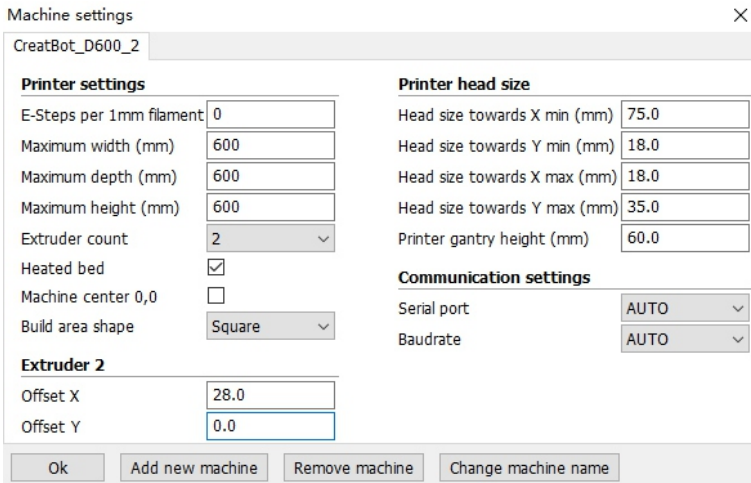

There are alignment problem while printing dual color model, this is because the small difference in multi-nozzle assembly, CreatWare built fine-tuning features.



Click menu "Machine">"Machine settings", default X offset is: 20.0, default Y offset is: 0.0, adjustment method as shown below:

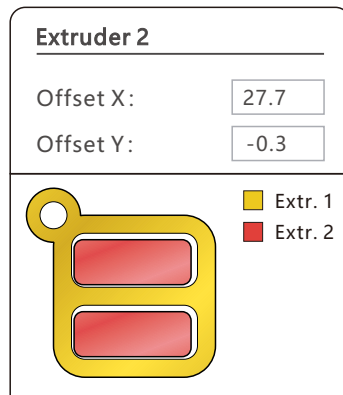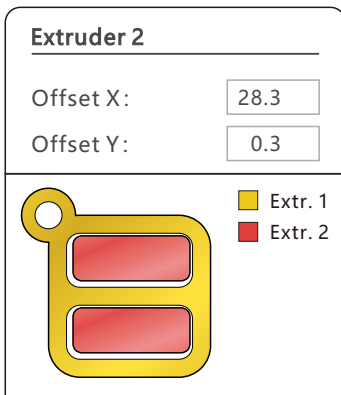



# Software Opertation

## Align Dual Head Vertical

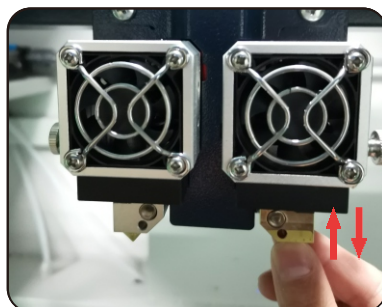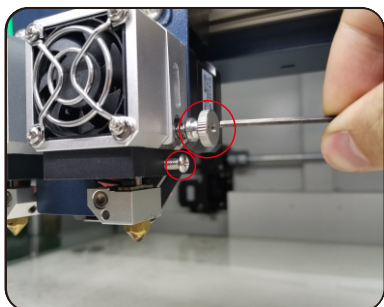

**Step 1:** loose the 2 screws with red circle.

**Step 2:** raise or lower hotend with heads after cooling nozzle

**Step 3:** Lower left nozzle step by step same with right nozzle.

(Note: every time you raise or lower nozzle, you need to adjust the offset value in autoleveling menu)



*Tip: You can rising right nozzle as long time not use.*

## Add Multi Type Printer

You can add more than one type of CreatBot to the software, and easily switch between them without re-config all the different machine

CreatBot - 6.4.1 - www.CreatBot.com

File Tools Machine Expert Help

Basic Advan **Machine**

Quality

Layer height

Extrusion w

Perimeters

• CreatBot\_D600

Add new machine...

Machine settings...

Install custom firmware...

2

Configuration Wizard

### Select your machine

What kind of machine do you have:

- CreatBot\_DM (250\*250\*300)
- CreatBot\_DM\_Mini (200\*200\*250)
- CreatBot\_DM\_Plus (250\*250\*450)
- CreatBot\_DX (300\*250\*300)
- CreatBot\_DX\_Plus (300\*250\*520)
- CreatBot\_DE (400\*300\*300)
- CreatBot\_DE\_Plus (400\*300\*520)
- CreatBot\_D600 (600\*600\*600)

how many extruder do your machine have:

- 1
- 2
- 3

The collection of anonymous usage information helps with the continued improvement of CreatWare. This does NOT submit your models online nor gathers any privacy related information.

Submit anonymous usage information:

For full details see: <http://www.creatbot.com>

< Back

Next >

Cancel



# Software Opertation

## Print Setting Of Different Filament

	Nozzle temperature	Hot bed	Plantform adhesion type	Fully enclose or not
PLA	190~210°C	None/45°C	None/Raft	Can open
ABS	240~250°C	90°C	Brim/Raft	Enclosed
Nylon	240~270°C	100°C	Brim/Raft	Enclosed
HIPS	230~260°C	100°C	None/Brim	Enclosed
PETG	230~260°C	100°C	None/Brim	Enclosed
Flexible	210~230°C	None/45°C	None	Can open
Wood	190~220°C	None/45°C	None	Can open
PC	230~260°C	100°C	Brim	Enclosed
PEEK	380~430°C	Bed 120°C/Air 70°C	Raft	Enclosed

\* The data is only for reference, different environmental data will be different. F160 and F430 can print PEEK.

# Frequently Asked Questions

## Hardware Troubleshoot

### **1. Display "MINTEMP" ?**

The environment is too low, or temperature sensor is damaged, please keep the room temperature above 0°C.

### **2. Display "MAXTEMP" ?**

Temperature of nozzle or bed too high, or temperature sensor is damaged, please keep their temperature in a suitable range.

### **3. USB connection problems ?**

Please specify the correct port and baud rate (250000), or change a shorter USB cable.

### **4. Nozzle heats up too slowly ?**

Temperature in door is too low, or use a fan duct, or turn up output voltage (24.5v).

### **5. Print head stuck ?**

Clean the guide rail and add lubricating oil.

### **6. Print head can not move ?**

Stepper motor chipset burned, or belt damaged, or belt wheel screw loose.

### **7. Print head hit the framework ?**

Corresponding axis stop limit or circuit fault.

### **8. Unable to power on ?**

Power switch is damaged or fuse is burned, and please check whether the power adapter is working properly or power check board is damaged.

## Printing Troubleshoot

### **1. How to set the temperature of the nozzle ?**

Different filament temperature is different, general as follows:

PLA temperature 190°C ~210°C ,bed 45-60°C .

ABS temperature 230°C ~250°C ,bed 80-100 °C .

You must leave enough time for filament heating, so the faster printing speed need the higher temperature, 60mm/s temperature need raise about 10°C. In the same way, larger thickness need higher temperature.

### **2. How to set the temperature of the hot bed ?**

The main purpose of the hot bed is to prevent model wrapped, PLA need about 45°C and 70°C for ABS is enough, but due to the environment and filament, we often need to increase the temperature, the highest temperature

# Frequently Asked Questions


## Change Fuse



*Note: Please use the 10A fuse.*




Open fuse tray

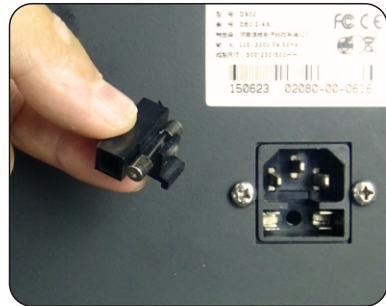

Change new fuse

## Adjust Z Limit

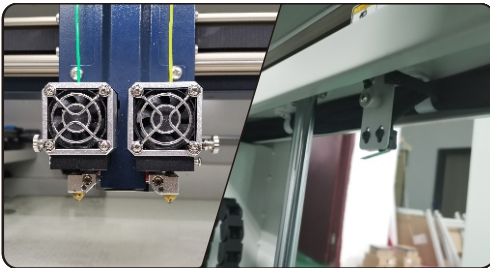

If the nozzle can't touch the platform even loosen all the leveling nut, you can move Z stop limit a little up, as you can see from figure.

## Print PLA and ABS

	Nozzle	Bed	Close bed	Adhesion	Cooling	Tape	Enclosed
PLA	200°C	45°C	Timed close	None/Brim	Max. 100%	masking	Can open
ABS	240°C	90°C	Always	Brim/Raft	Max. 50%	Kapton	Enclosed

*\* The data is only for reference, different environmental data will be different.*

## Printing Troubleshoot

not over 120°C, and you can close the bed above 100mm except printing ABS or other high-temperature required filaments.

### **3. The model not stick on the platform ?**

Please paste masking paper or Kapton tape on the platform, or the nozzle is too far away from the platform, or the bottom of the model is not flat.

### **4. No or less silk coming on the first layer ?**

The distance between nozzle and platform is too small, or the filament has not been sent to the nozzle.

### **5. Why nozzle is not spit silk ?**

The filament is not pressed or too tight, or print temperature is too low, or the filament feeder not working.

### **6. How to prevent model become warped ?**

Increase hot bed temperature or use Kapton, or change platform adhesion type to Raft, or cover the baffle, or reduce indoor ventilation.

### **7. How far from nozzle to platform appropriate ?**

Distance should be 0 in theory, but there is no absolutely flat platform, so the distance should  $\pm 0.1$ mm. Finally, with the actual printing effect as the standard, too close will lead to a silk blocked, too far will cause the model not stick on the platform.

### **8. How to determine whether the temperature is too high ?**

PLA temperature is too high will appear liquefaction, ABS will be the carbide, that will block the nozzle.

### **9. What reasons will causing nozzle blocked ?**

Filament are impurities or print environment dust too much, bad of thermal conductivity between the nozzle and the heating block.

### **10. Model surface is loose with crack ?**

The layer is too high or the printing speed too fast, nozzle temperature too low or filament press nut too loose, or filament is wrapped.

### **11. How to print a small model ?**

Multiple the model, and print them at a time.

### **12. Dual color model not aligned ?**

Adjust offset of second nozzle in machine settings.




### **13. Dual color model color interference ?**

Align two nozzle in vertical direction





### **14. There is too much silk drag on the model ?**

Please enable filament retraction, and specified proper retract speed, and distance, the retract distance should not less than 4mm, and the speed not less than 10mm/s.

## Specifications

			
Model	F160	F430	D600
Build volume	160*160*200	400*300*300	600*600*600
Nozzles	Single	Single/Dual	
Diameter	0.4mm(0.3/0.6/0.8/1.0mm can be customized)		
Temperature	400 °C		360 °C
Nozzles Type	Direct drive		
Hot bed	140 °C	Bed 120 °C/Air 70 °C	100 °C
Min. Layer	0.04mm		
Accuracy	X、Y、Z axis 0.01mm		
Print Speed	120mm/s (inner/outer, top/bottom, fill, first layer speed can be set separately)		
Travel Speed	200mm/s		
Materials	ABS,PLA,TPU,PETG,HIPS,PVA, PA,PC,Carbon Fibre,PEEK,etc		
Fila. Diameter	1.75mm		3.0mm
Motion Structures	Optic axis		Rectilinear orbit
Auto Turnoff	Yes (pwr manager + relay)		
Continue Play	Yes (Power outage, lower plate and save data)		
Fila. Check	Yes (pause printing when filament finish, and lower platform)		
Adju. Head	Yes (height-adjustable-nozzles)		
OS	Windows, Linux, Mac OS, OSX		
Languages	Chinese, English multi-language		
Software	CreatWare Muti-language		
File Format	STL, OBJ, GCode, Amf		
Printing Field	Full closed covering		
Display	4.3 inches color touch screen		
Pwr Supply	110/220V 180W	110/220V 1300W	110/220V 1000W
Dimension	280*280*470mm	660*470*560mm	910*840*1100mm
Weight	22Kg	60Kg	170Kg

## Specifications

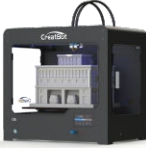				
Model	DX	DX Plus	DE	DE Plus
Build volume	300*250*300	300*250*520	400*300*300	400*300*520
Nozzles	Dual/Tris			
Diameter	0.4mm(0.3/0.6/0.8/1.0mm can be customized)			
Temperature	400°C			
Nozzles Type	print head/new print head			
Hot bed	120°C (can be closed after certain layers)			
Min. Layer	0.04mm			
Accuracy	X、Y、Z axis 0.01mm			
Print Speed	120mm/s (inner/outer, top/bottom, fill, first layer speed can be set separately)			
Travel Speed	200mm/s			
Materials	ABS,PLA,TPU,PETG,HIPS,PVA, PA,PC,Carbon Fibre,etc			
Fila. Diameter	3.0mm (1.75mm optional)			
Keypad	Yes (nine key)			
Auto Turnoff	Yes (pwr manager + relay)			
Continue Play	Yes (Power outage, lower plate and save data)			
Fila. Check	Yes (pause printing when filament finish, and lower platform)			
Adju. Head	Yes (height-adjustable-nozzles)			
OS	Windows, Linux, Mac OS, OSX			
Languages	Chinese, English multi-language			
Software	CreatWare Multi-language			
File Format	STL, OBJ, GCode, Amf			
Chipset	Atmega 2560-16AU (AVR 8 Bit 16MHz, 256KB Flash)			
Display	128*64 monochrome multi-language (support color TFT)			
Pwr Supply	110/220V 360W		110/220V 700W	
Dimension	420*380*570	420*380*790	590*430*570	590*430*790
Weight	35 Kg	40Kg	45Kg	55Kg



Quality · Experience · Service

**Henan Suwei Electronics Technology Co., Ltd.**

---

Telephone: +86 4000-558-930

Website: [www.CreatBot.com](http://www.CreatBot.com)

Email: [sales@creatbot.com](mailto:sales@creatbot.com)

Address: A805 XingHua Building, HangHai road,  
Zhengzhou City, China